

Connecting Rain Guage to T1 RTU

1. Feed Rain Guage(RG) cable through one of the fittings on the bottom of the radio, the one on the right works best if available. Loosening of outer crimping nut may be required.
2. Along the bottom row of wiring blocks, on the right side there is a set labeled "Rain" (2nd and 3rd screws from the right)
3. The red wire goes into the screw labeled "Rain" This is a clamp style block. To insert wires loosen screw a bit and insert wires between the two plates. Cinch plates together by tightening screw.
4. Green goes into screw labeled "GND"
5. Clip the black and yellow wires off as they are unneeded.
6. Tighten up the crimping nut on outside of RTU box to ensure weatherproofing.

